


INSTALLATION INSTRUCTIONS

DUAL SHADES

Note on Motorization: Prior to installation, pair the shade to remote using the programming instructions that are included with the remote control.


1. Install the Brackets

Important: Make sure the mounting surface is level. Brackets must be in line and level for shade to operate properly.

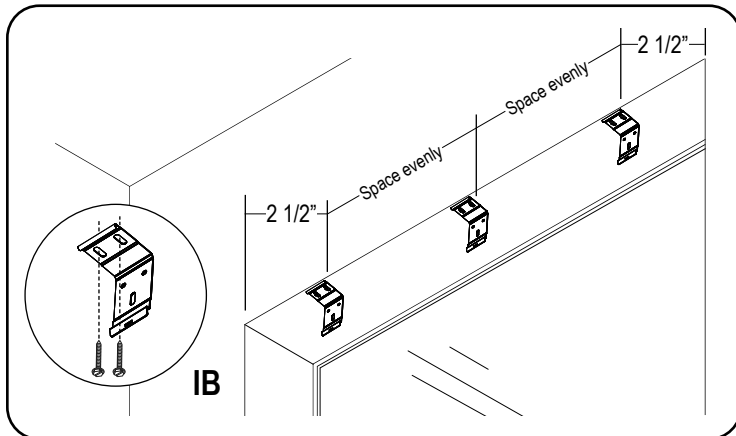


Inside Mount, install the brackets level and aligned to each other, using the screws provided.


Outside Mount, center the shade over the window opening at the desired height and mark the end of the clutch side of the shade. Measure the width of the shade fabric, and mark the width of the fabric plus 1 1/4" from the previously marked mark.

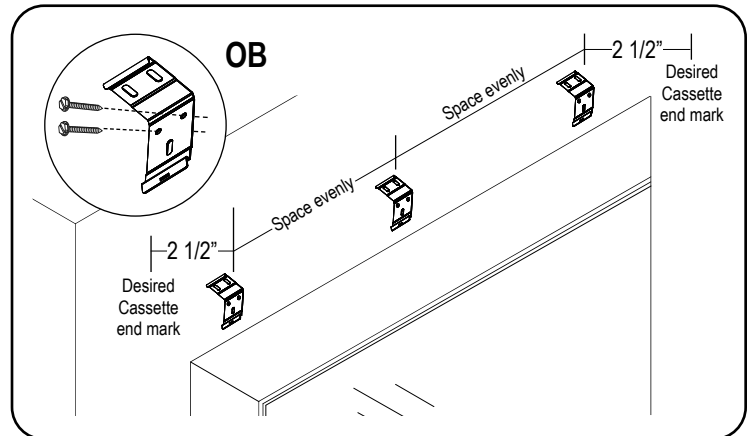


2. Install the Shade

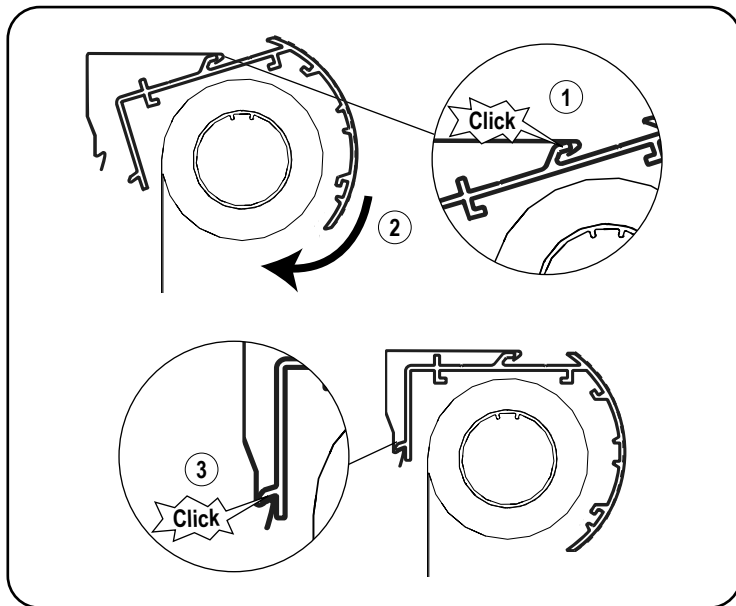

3. Removing the Shade (Only if Necessary)

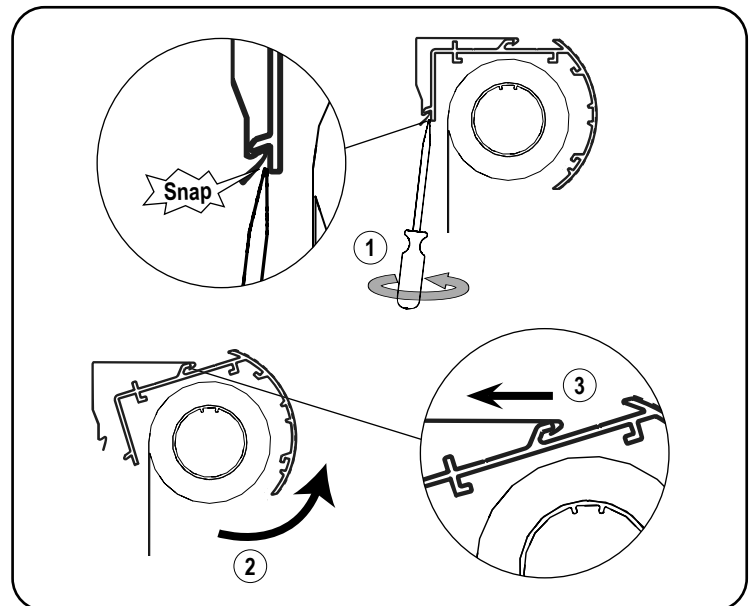

4. AgileLift (Optional)

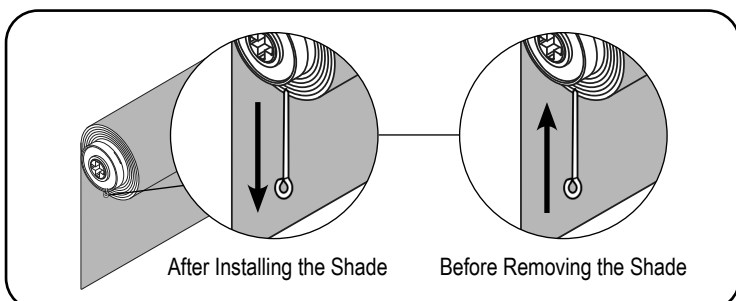


Note: Illustration shown without a Cassette for clarity.

Important: Do not pull the lock pin until shade is securely assembled onto the brackets. Once removed, keep the lock pin in a safe place, as it will be needed to remove the shade.

With the shade installed, remove the lock pin prior to operating by pulling it downward. If for any reason needs to make an adjustment on the position of the installation brackets or remove the shade; raise the shade and **insert the lock pin prior to disengaging the shade** from the installation brackets.

INSTALLATION INSTRUCTIONS


5a. Install the Cord Loop Tensioner — (Standard - Clutch Only)

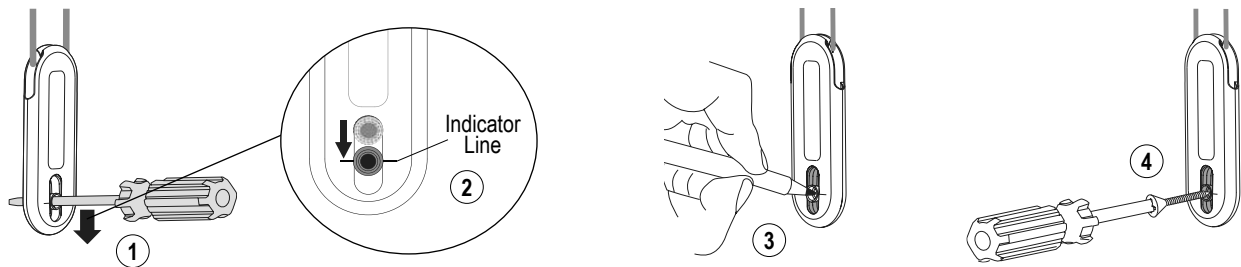

Before you begin, you **must** slide the cord tensioner to the bottom of the cord loop. 1. Insert a small screwdriver, punch, or awl through the screw hole at the bottom of the cord tensioner. 2. Pull the screw hole down, releasing the safety mechanism, so that the center aligns with the indicator line. 3. Slide the cord tensioner down to the bottom of the cord loop, then mark and pre-drill the screw holes. 4. Secure the cord tensioner with the screw provided. **Important:** Do Not Over-Tighten.


Note: If the cord does not move freely through the cord tensioner, it is too tight and the cord tensioner and/or mount bracket should be moved up. If the cord tensioner locks onto the cord, it is too loose and the cord tensioner and/or mount bracket should be moved down.

5b. Installing the Beaded Cord Tensioner — (Optional - Clutch Only)

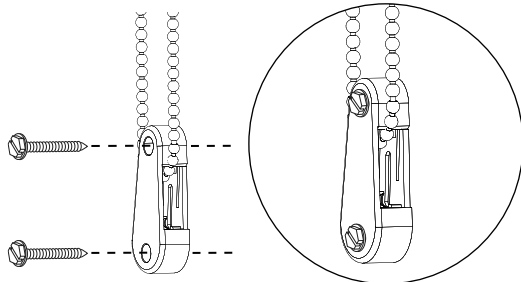


Inside mount (IB)

Pull tension device down until the chain is taut and then move the tension device up approximately 1/8". Mark the upper and lower screw hole and install the device with the screws provided. **Important:** Do Not Over-Tighten.

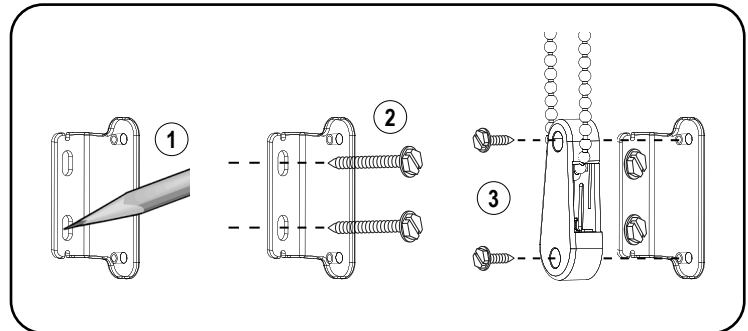

Outside mount (OB)

6. Install the Hold Down Brackets (Optional)

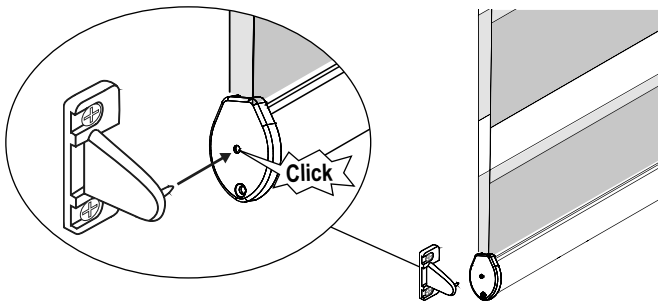

Important: The bottom rail must be disconnected from the hold down brackets to raise the shade.

First, lower the shade and place the hold down pins into the hole on the bottom rail end caps. Then, mark the hold down bracket locations on the mounting surface. Center the hold down brackets over the mounting hold locations and check their alignment. Finally, attach the brackets using screws.

Child Safety

Young children can be **STRANGLED** in cord loops and in the loop above the cord stop. Always keep cords out of children's reach.

- Move cribs, playpens and other furniture away from cords. Children can climb furniture to get to cords.
- Do not tie cords together.
- Make sure cords do not twist together and create a loop.

WARNING/ADVERTENCIA	
5.1.3	Rev. 5/18 Print 5/18
	Window Blind Cord Can STRANGLE Your Child. To prevent strangulation, purchase cordless products or products with inaccessible cords.
	La cuerda de la persiana puede ESTRANGULAR a su niño. Para evitar el estrangulamiento, compre alternativas cuerda o productos con cuerdas inaccesibles.



C8-10-9000