

FAUX WOOD BASICS


INSTALLATION INSTRUCTIONS

1

TOOLS

GETTING STARTED - TOOLS NEEDED FOR INSTALLATION

Rechargeable Drill with 1/4" Hex Bit / Phillips Screwdriver / Pencil / Tape Measure

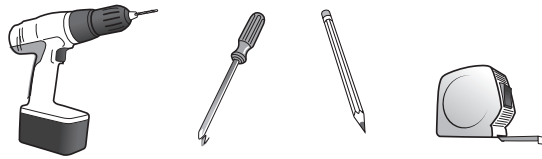

2

UNPACKING THE PARTS



Locate the parts and brackets in hardware box.
The quantity will vary with blind size.

Center Support Bracket will only be sent for blinds over 37" wide.

Installation Brackets

Valance Clips

Center Support

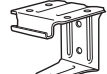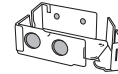

Hold-down Bracket


Installation Screws



3



BRACKET PLACEMENT

Left Bracket

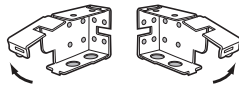

Right Bracket



IF APPLICABLE:
Center Support Bracket

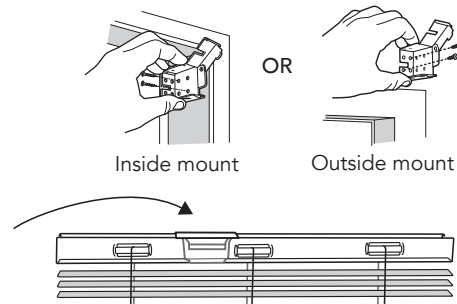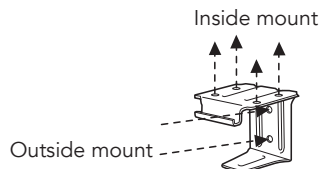


4

VALANCE CLIPS

Attach Valance Clips

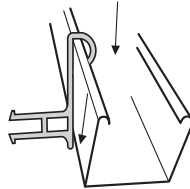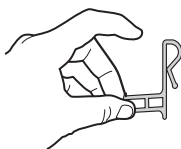




Clip on to Headrail

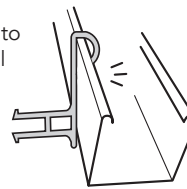


5

FINISHING UP


Slide into Brackets

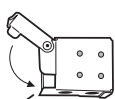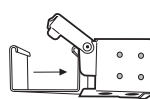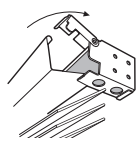



Attach Wand

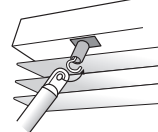


Install Valance

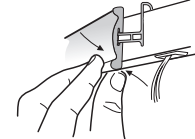

IF APPLICABLE:
Hold-down brackets

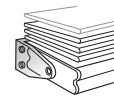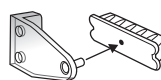

OR

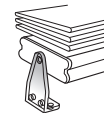

6

OPERATING INSTRUCTIONS

Raise or lower the blind by lifting or lowering the bottom rail to the desired height.

PLEASE NOTE: This product is made up to +6" of ordered height. This is normal for this product and not considered a manufacturing error or defect.

Open or close the blind slats by turning the wand until the slats are opened or closed to the desired amount.



1033590